


RUBBERIZED SURFACING
OVER SMOOTH OR MOD BIT.

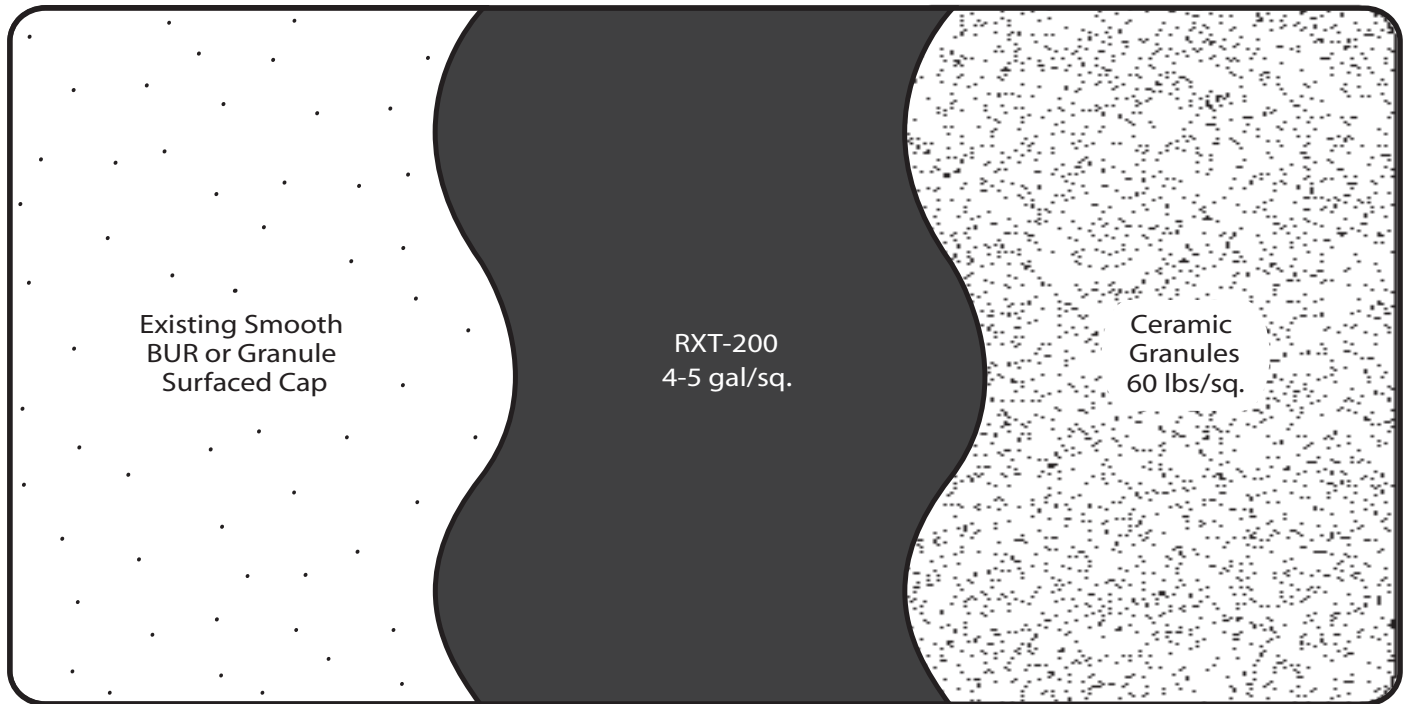

GENERAL

ROOF X TENDER® Guide RXT-BU-200-CG is a rubberized maintenance surfacing designed for use over smooth built up and modified roof systems. RXT-200 penetrates and rejuvenates the asphaltic oils from existing roof systems and extends the service life of existing roof membranes. All preparation and repairs must be completed prior to application of coating and reinforcements. Three course all drains, curbs, penetrations, flashings, etc. using polyester and ROOF X TENDER® 100. Comply with all safety and fall requirements as recommended by OSHA. Always follow good roofing practices as recommended by NRCA. Roofs must maintain positive drainage. Always verify weather conditions before, during and after application (temperatures, humidity, wind and precipitation). Check and follow individual product directions for specific application and installation requirements on product data sheets, labels and MSDS sheets. This is a summary sheet. For job specific requirements and specifications consult with an architect, engineer, roof consultant or design professional.

MATERIAL QUANTITIES

RXT-100	Mastic	As needed
Polyester	Flashing & Field Reinforcement	As needed
RXT-200	Coating	4-5 gallons per square
Ceramic Granules	Surfacing	60-100 lbs per square
Total		4-5 gallons per square

INSTALLATION

STEP 1 - Leak repairs

- Complete a moisture survey to locate wet insulation.
- Locate and mark all leaks on the roof surface.
- Remove and replace wet insulation as shown on moisture survey.

- Re-roof (tear out) areas and replace with new insulation and membrane equal to existing system.

STEP 2 - Flashing details

- Repair roof splits with three course application of RXT-100 flashing cement and polyester. (3 oz min.)
- Prime exposed metal flanges with ASTM D-41 asphalt primer before three coursing
- Three course all base flashings at parapet walls, curbs, skylights, penetrations and expansion joints using RXT-100 and polyester fabric.
- Re-seal loose seams on cap sheets with application of RXT-100 flashing cement and polyester
- Top off existing pitch pans with RXT-100 flashing cement.
- Three course drains a minimum of 3' X 3' and run polyester and RXT-100 under drain ring
- Remove metal copings and install a polyester reinforced SA asphalt tape over entire top and a min. of 2 inches down both sides of wall. Then reinstall metal coping and seal all seams.

STEP 3 - Surface prep

- Remove all loose dust and debris using power broom and blower or roof vacuum or combination.
- Power wash roof and allow to dry min. 24 hrs.
- Tape off and shield surfaces which are not to be coated.

STEP 4 - Rejuvenate, Reinforce and Resurface

- Apply ASTM D-41 asphalt primer at the rate of 1 gallon per square and let cure 24 hrs.
- Apply RXT-200 Coating at the rate of 3-4 gallons per square using a brush, squeegee or roller.
- Let first coat cure and then embed granules into a kiss coat (1-2 gallons) of RXT-200 at the rate of 60-100 lbs per square. RXT-200 is not a spray grade product and must be applied by brush, squeegee or roller.

WARRANTY AND DISCLAIMER: To the best of our knowledge, the guide data contained herein is true and accurate at the date of issuance and is subject to change without prior notice. User must contact TRI-BUILT® MATERIALS GROUP, LLC to verify correctness before specifying or ordering. No guarantee of accuracy is given or implied. Liability, if any, is limited to replacement of product unless installed by an approved contractor in accordance with TRI-BUILT® MATERIALS GROUP, LLC warranty procedures and program.